

# Audi A3

## Current Flow Diagram


**No. 90 / 1**

Edition 07.1999

### Driver information system


From model year 2000

#### Fuse box:

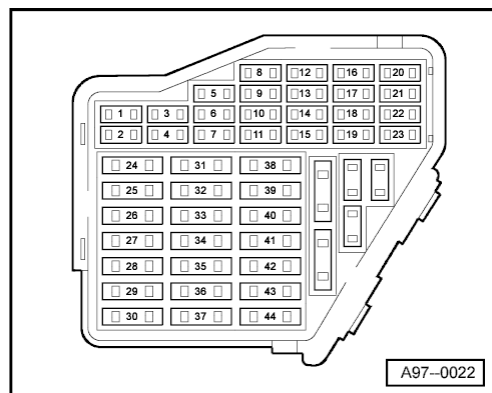

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

#### 13-point relay carrier:

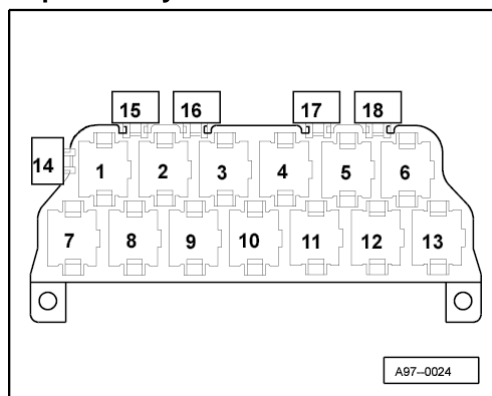

#### Position of relays:

- 2 - Bulb monitoring device
- 3 - Bulb monitoring device



Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5A - beige

Audi A3

Current Flow Diagram

No. 90 / 2

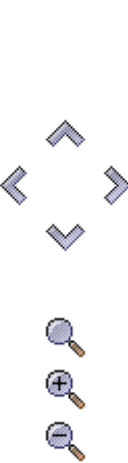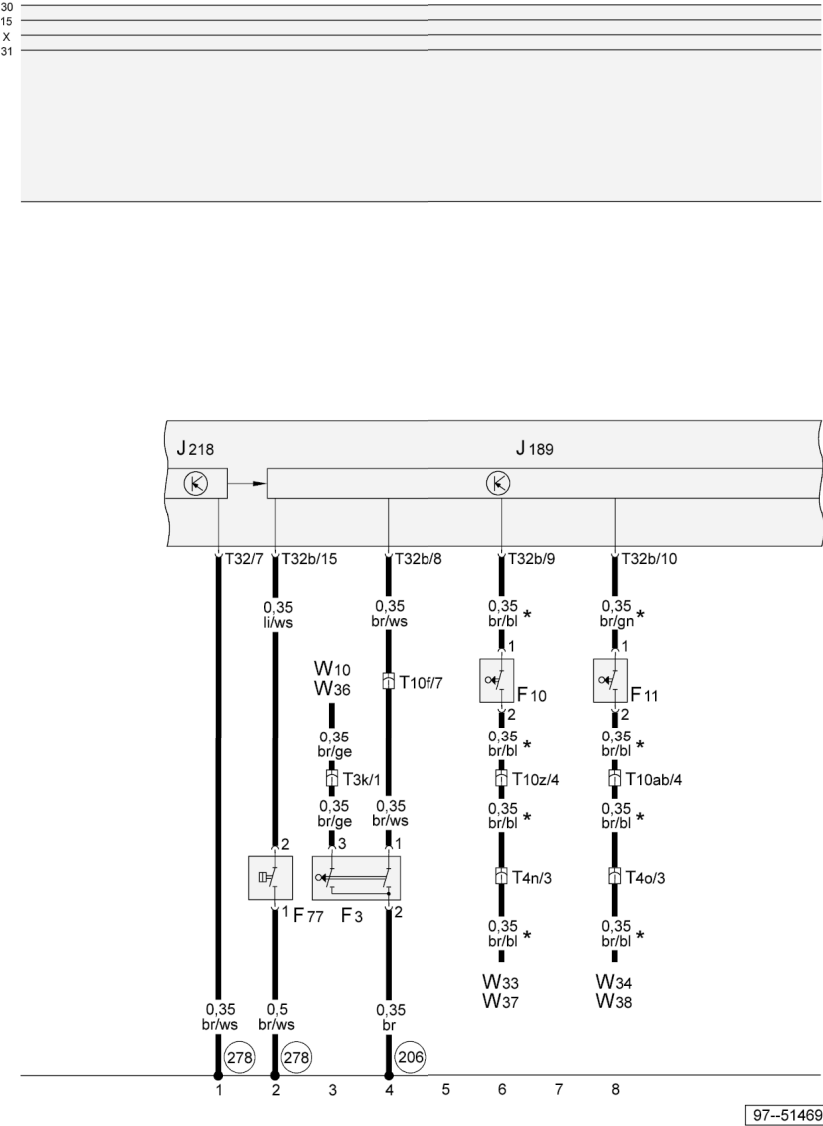

- On-board computer with auto-check system, ambient temperature indicator, washer fluid level indicator**
- F3 - Door contact switch, front passenger's side
  - F10 - Rear left door contact switch
  - F11 - Rear right door contact switch
  - F77 - Windscreen washer fluid warning contact
  - J189 - Auto-check system
  - J218 - Combi-processor in dash panel insert
  - T3k - 3-pin connector, black, in front passenger's door
  - T4n - 4-pin connector, black, in rear left door
  - T4o - 4-pin connector, black, in rear right door
  - T10f - 10-pin connector, brown, connector carrier, A pillar, right
  - T10z - 10-pin connector, green, connector carrier, B pillar, left
  - T10ab - 10-pin connector, green, connector carrier, B pillar, right
  - T32 - 32-pin connector, blue, on dash panel insert
  - T32b - 32-pin connector, grey, on dash panel insert
  - W10 - Right footwell light
  - W33 - Rear left entry light
  - W34 - Rear right entry light
  - W36 - Door warning lamp, front passenger's side
  - W37 - Door warning lamp, rear left
  - W38 - Door warning lamp, rear right
  - 206 - Earth connection, in door wiring harness - front passenger's side
  - 278 - Earth connection -4-, in interior wiring harness
  - \* - Only on 4-door models

ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = purple  
ge = yellow  
or = orange  
rs = pink

Audi A3

Current Flow Diagram


No. 90 / 3



## Audi A3

## Current Flow Diagram

No. 90 / 4

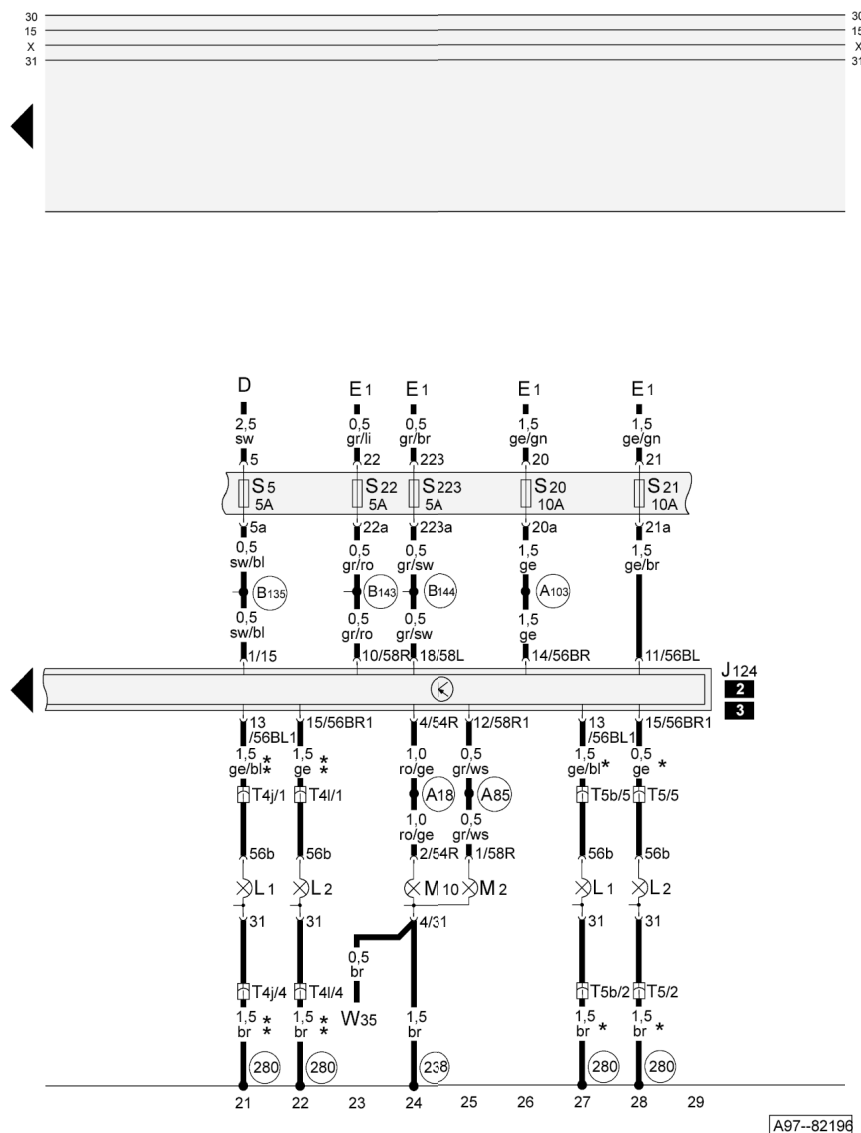

## Bulb monitoring device, rear

- D - Ignition/starter switch
- E1 - Lighting switch
- 124 - Bulb monitoring device, rear
- L1 - Twin filament bulb for headlight, left
- L2 - Twin filament bulb for headlight, right
- M2 - Tail light bulb, right
- M10 - Brake light bulb, right
- T4j - 4-pin connector, headlight, left
- T4l - 4-pin connector, headlight, right
- T5 - 5-pin connector, on headlight, right
- T5b - 5-pin connector, on headlight, left
- W35 - Luggage compartment light, right
- 238 - Earth connection -1-, in interior wiring harness
- 280 - Earth connection -2-, in engine compartment wiring harness
- A18 - Connection (54), in dash panel wiring harness
- A85 - Connection (58R), in dash panel wiring harness
- A103 - Connection -2- (56), in dash panel wiring harness
- B135 - Connection (15a), in interior wiring harness
- B143 - Positive (+) connection (58R), in interior wiring harness
- B144 - Positive (+) connection (58L), in interior wiring harness
- \* - Does not apply to 1.8 litre turbo-Motronic 154kW
- \*\* - Only applies to 1.8 litre turbo-Motronic 154kW