

# Audi A3

## Current Flow Diagram


**No. 38 / 1**

Edition 08.1997

### Driver information system


From model year 1998

#### Fuse box:

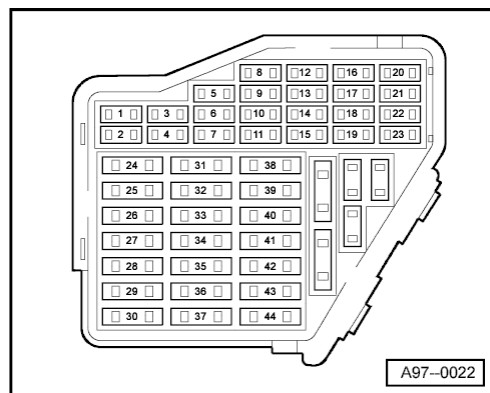

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

#### 13-point relay carrier:

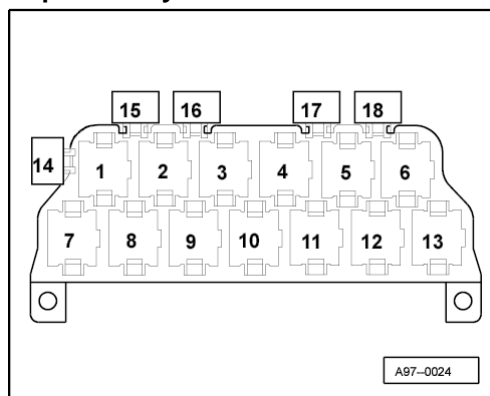

#### Position of relays:

- 2 - Bulb monitoring device
- 3 - Bulb monitoring device


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 5A - beige

## Audi A3

## Current Flow Diagram

No. 38 / 2

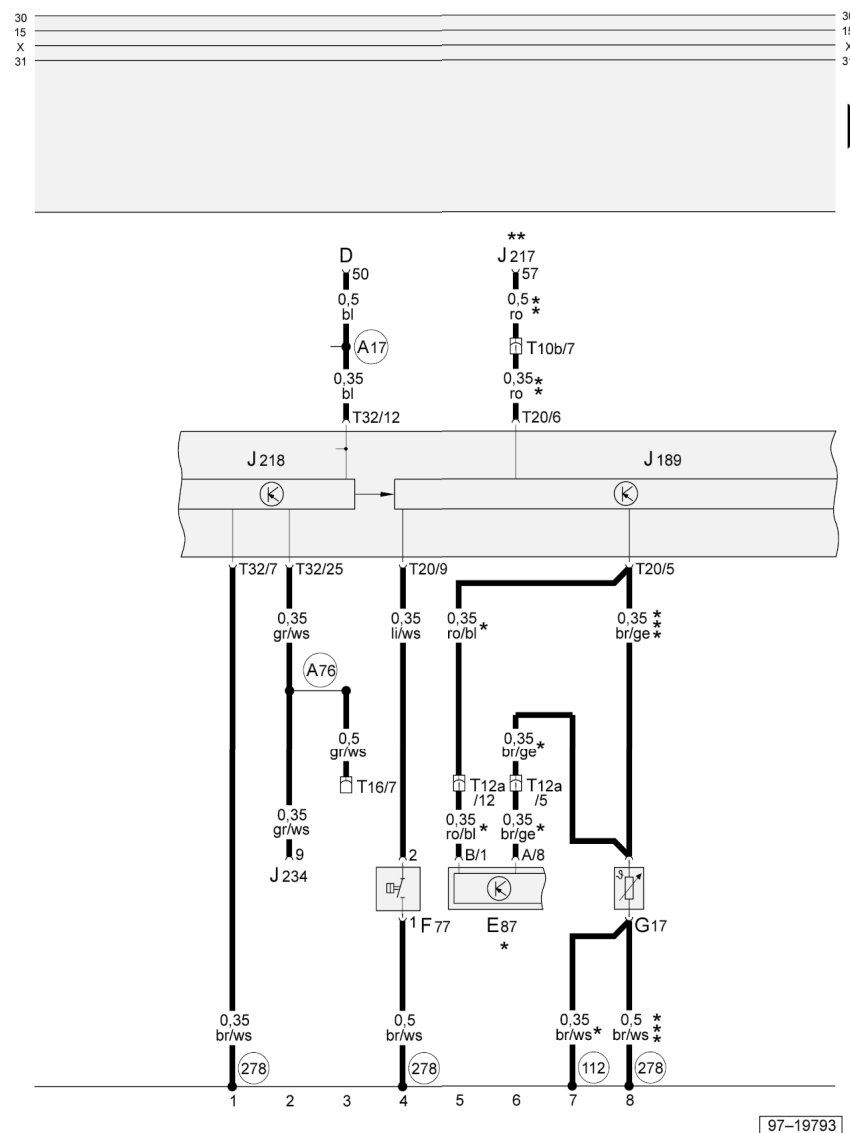

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

## On-board computer with auto-check system, ambient temperature indicator, washer fluid level indicator

- D - Ignition/starter switch
- E87 - Control and display unit for air conditioner
- F77 - Windscreen washer fluid warning contact
- G17 - Ambient temperature sensor
- J189 - Auto-check system
- J217 - Automatic gearbox control unit
- J218 - Combi-processor in dash panel insert
- J234 - Airbag control unit
- T10b - 10-pin connector, grey, in plenum chamber
- T12a - 12-pin connector, behind dash panel, right
- T16 - 16-pin connector, black, centre console compartment
- T20 - 20-pin connector, red, on dash panel insert
- T32 - 32-pin connector, blue, on dash panel insert
- 112 - Earth connection -2-, in air conditioner wiring harness
- 278 - Earth connection -4-, in interior wiring harness
- A17 - Connection (61), in dash panel wiring harness
- A76 - Connection (diagnosis wire K), in dash panel wiring harness
- \* - Only models with air conditioner
- \*\* - Only models with automatic gearbox
- \*\*\* - Does not apply to models with air conditioner

## Audi A3

## Current Flow Diagram

No. 38 / 3




ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = purple  
ge = yellow  
or = orange  
rs = pink

- E91 - Function selection switch
- E92 - Reset button
- F - Brake light switch
- J124 - Bulb monitoring device, rear
- J189 - Auto-check system
- J220 - Motronic control unit
- J248 - Diesel direct injection system control unit
- J361 - Simos control unit
- M25 - High level brake light bulb
- R - Radio
- T6b - 6-pin connector, blue, in luggage compartment, left
- T6k - 6-pin connector, on radio
- T10x - 10-pin connector, orange, in plenum chamber
- T20 - 20-pin connector, red, on dash panel insert
- 28 - Earth connection, in tailgate/boot lid wiring harness

- |      |  |
|------|--|
| 279  | - Earth connection -5-, in interior wiring harness                 |
| B131 | - Connection (54), in interior wiring harness                      |
| B160 | - Connection (brake system monitoring), in interior wiring harness |
| *    | - Applies to engine codes AGR, ALH and AHF only                    |
| **   | - Applies to engine codes AGN and AGU only                         |
| ***  | - Applies to engine codes AEH and AKL only                         |

**No. 38 / 4**

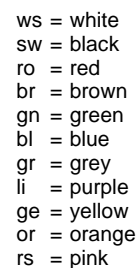

D	- Ignition/starter switch
J124	- Bulb monitoring device, rear
L1	- Twin filament bulb for headlight, left
L2	- Twin filament bulb for headlight, right
M2	- Tail light bulb, right
M4	- Tail light bulb, left
M9	- Brake light bulb, left
M10	- Brake light bulb, right
T5	- 5-pin connector, on headlight, right
T5b	- 5-pin connector, on headlight, left
238	- Earth connection -1-, in interior wiring harness
280	- Earth connection -2-, in engine compartment wiring harness
A2	- Positive (+) connection (15), in dash panel wiring harness
A18	- Connection (54), in dash panel wiring harness
A84	- Connection (58L), in dash panel wiring harness
A85	- Connection (58R), in dash panel wiring harness
A89	- Connection (54), in dash panel wiring harness
A103	- Connection -2- (56), in dash panel wiring harness
B135	- Connection (15a), in interior wiring harness
B143	- Positive (+) connection (58R), in interior wiring harness
B144	- Positive (+) connection (58L), in interior wiring harness