


Dash panel insert - up to Model Year 1999


Assignment of contacts at multi-pin connectors at dash panel insert - as of Model Year 1998

Blue 32-pin connector

- 1 - → Terminal 15
- 2 - Right turn signal indicator
- 3 - Speedometer output 1
- 4 - Not used
- 5 - Fuel-gauge sender
- 6 - Airbag
- 7 - Terminal 31 (sensor earth)
- 8 - Coolant temperature
- 9 - Terminal 31 (load earth)
- 10 - Oil pressure switch
- 11 - Engine-speed signal
- 12 - Terminal 61
- 13 - Glow period warning lamp or CAT
- 14 - Self-levelling suspension (not used at present)
- 15 - Terminal 58d
- 16 - Trailer turn signal indicator

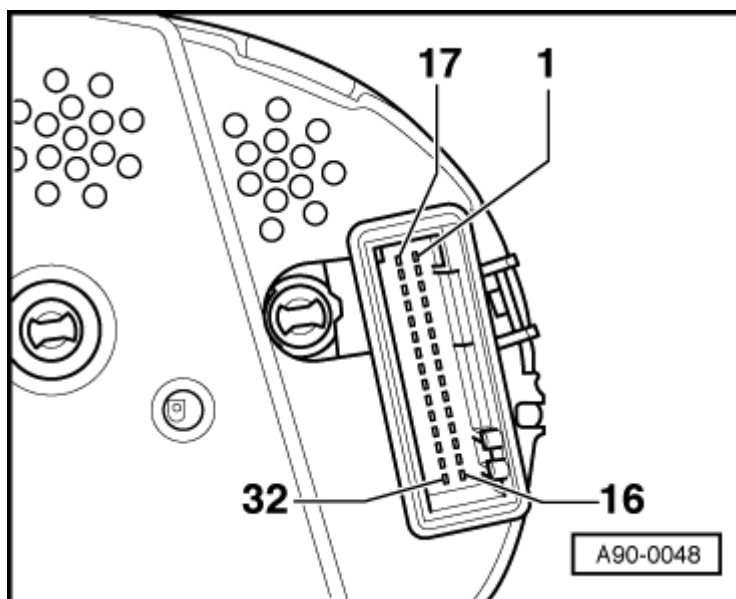

- 17 - Main beam
- 18 - Left turn signal indicator
- 19 - ABS
- 20 - Terminal 58b
- 21 - Driver's door contact
- 22 - Coolant low
- 23 - Terminal 30
- 24 - Terminal 31 (load earth)
- 25 - K-wire
- 26 - Right parking light
- 27 - Left parking light
- 28 - Speedometer input
- 29 - Brake fluid level/pressure
- 30 - S-contact
- 31 - Belt buckle
- 32 - TCS

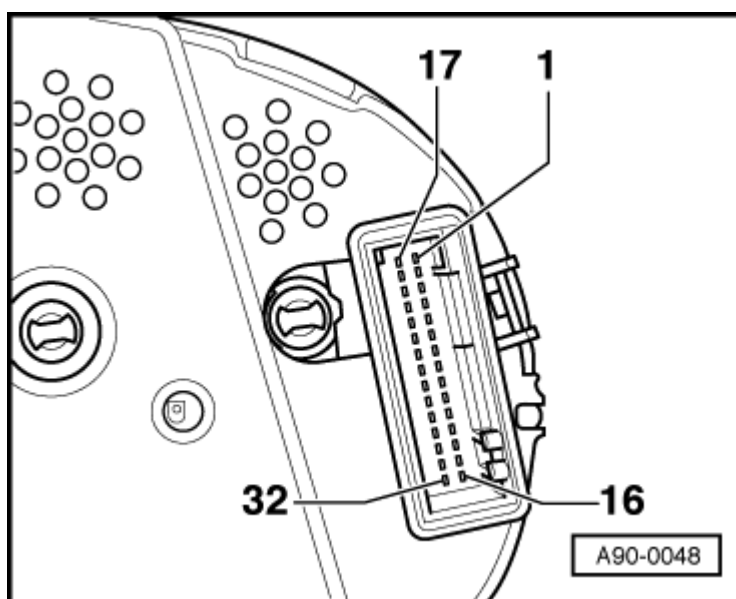

Green 32-pin connector

- 1 - → Not used
- 2 - Transponder 1
- 3 - Not used
- 4 - Not used
- 5 - W-wire
- 6 - Tailgate/boot lid (midline version only)
- 7 - Brake pad (not used at present)
- 8 - Input for external buzzer


actuation (not used at present)

9 - Input for external gong
actuation (not used at present)

10 - Tank warning output signal
for engine control unit (not used at
present)

11 - Standing time output

12 - Air conditioner shutoff

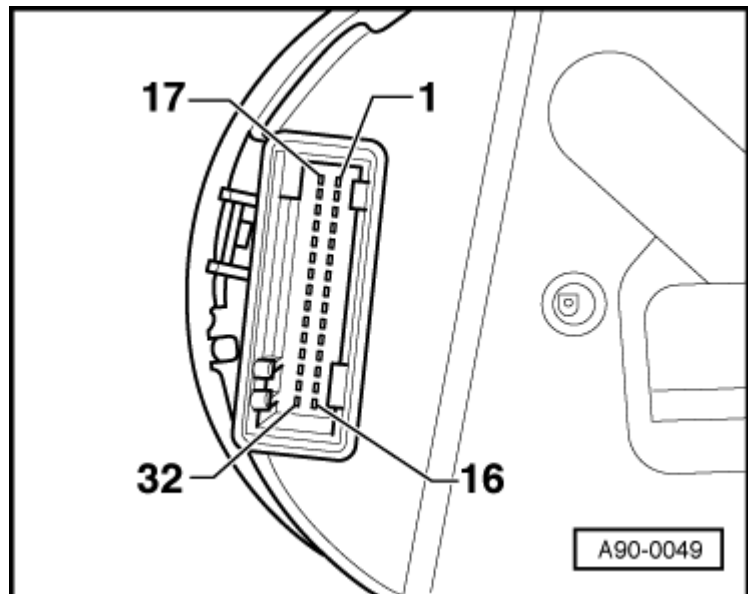

13 - → Parking brake

14 - Electronic throttle

15 - Side light

16 - Not used

17 - Transponder 2

18 - Not used

19 - Not used

20 - Not used

21 - Not used

22 - Not used

23 - Not used

24 - Not used

25 - Not used

26 - Not used

27 - Not used


28 - Not used

29 - Terminal 58d (external
dimmer potentiometer)

30 - Speedometer output 2

31 - Not used

32 - Not used

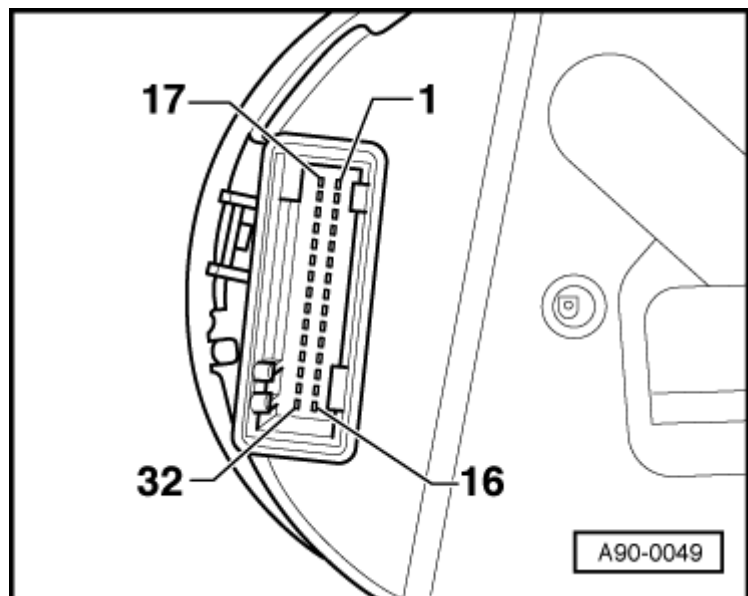

Red 20-pin connector

1 - → Consumption signal

2 - Not used

3 - Not used

4 - Not used

5 - Ambient temperature

6 - Selector lever position

display

7 - Not used

8 - Not used

9 - Washer fluid

10 - Hydraulic pressure

11 - On-board computer/reset

12 - Clock signal for radio

frequency display

13 - Data signal for radio

frequency display

14 - On-board computer/left

15 - Enable signal for radio

frequency display

16 - Reversing light/dipped
beam (lamp check)

17 - Glow plug relay (with diesel
engine only, undervoltage monitoring
in dash panel insert is suppressed
during glow period)

18 - On-board computer/right

19 - Brake light

20 - Not used

